

NO

VIKTIG: ÅPNE PAKKENE KUN  
RETT FØR INSTALLASJON.

# SAGA HARDWOOD

farveringen

Installasjonsveiledning vedlagt.  
Vennligst plukk ut og les nøye.

Enkel installasjon: Vinkle ned langsiden og klikk  
sammen kortsiden i samme operasjon. Ferdig!



**Lindura**  
SURFACE TECHNOLOGY

## INSTALLASJONSVEILEDNING FOR SAGA HARDWOOD

**SAGA Hardwood er ideelt for alle tørre oppholdsrom som stue, soverom og kommersielle områder med middels til normal slitasje som hotellrom. Det er ikke egnet til montering i våtrom (bad, badstue osv.).**

I dette instruksjonsheftet tar vi for oss de viktigste punktene for montering og vedlikehold.

Følgende verktøy er nødvendig for å montere SAGA Hardwood:

Hammer, sag eller stikksag, **sagblad med hardmetallskjær eller diamantskjær**, meterstokk, blyant, vinkel, slagkloss, kiler, fuktspærre (0.2mm), brekkjern og eventuelt en drill.

For installasjon av Saga Hardwood skal det legges ut et underlagsmateriale.

Underlagsmaterialet skal ha en trykkfæthet (CS-verdi) over 15kPa og en utjevningsevne (PC-verdi) på 1 mm eller mer.

## GENERELL INFORMASJON

Gulvet legges flytende uten bruk av lim og skal ikke presses fast eller festes med skruer. Tregulv er et naturprodukt og har da en naturlig fargedifferanse i bordene. For å oppnå et så naturlig fargespill som mulig, åpne flere pakker av gangen og bland plankene godt. Unngå å legge planker med stor fargeforskjell inntil hverandre.

MasterClicPlus klikksystem sørger for en rask og enkel legging. Planken klikkes på plass ved å legge den i neste rad. Under leggingen vil da plankene automatisk rette seg etter hverandre. For å legge, hold planken med en lett vinkel inntil den foregående planken og styr noten inn i fjæren (Fig. A).

Vi anbefaler likevel en „manuell“ aktivering av MasterClicPlus-plastdelen ved hjelp av et 10 cm langt avkappet bord.

Hvis undergulvet er lengre eller bredere enn 10m, må gulvet deles med en ekspansjonsfuge. Det er også viktig at gulvet deles når man legger mellom to tilstøtende rom, døråpninger eller rom med flere vinkler.

Dersom det er høydeforskjell på tilstøtende rom eller ved overgang til f.eks. gulvbelegg eller fliser, kan man bruke nivålist for å lage jevne overganger. I trapper og lignende kan du bruke en vinkelprofil for en fin finish.

Når du installerer bør du bruke kiler til å sørge for en avstand til veggene.


Områder <6 meter = min. 10 mm ekspansjonsfuge mot vegg og eventuelt andre faste installasjoner som - men ikke begrenset til - søyler, dørkammer, kjøkken, kjøkenøy, vedovn, lettvegger, trapper, radiatorer etc.

Ytterligere 1,5 mm ekspansjonsfuge per ekstra lineær meter, men ikke nødvendig med mer enn 15mm ekspansjonsfuge. Maksimal romlengde på 10 meter skal tas i betraktning.



Denne avstanden må du også ha i til piper, karmer, varmerør og ståldører. Dørflister kan under visse omstendigheter kortes ned. Dette gjør du ved å legge en plank med overflaten ned og inntil dørflisten. Så kan du legge sagen inntil å kappe av.

For å beskytte treverket mot riper, skal det brukes filtknøtter under stoler, bord og andre møbler. Kontorstoler, skap, etc. med hjul må ha et glatt og jevnt underlag. Vi anbefaler å beskytte utsatte og områder med stor slitasje (f.eks. polycarbonat matter).

### Installasjon langsiden

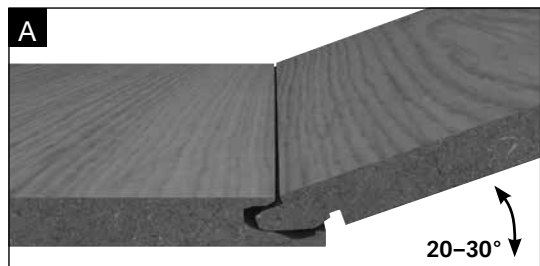

### Installasjon kortsiden

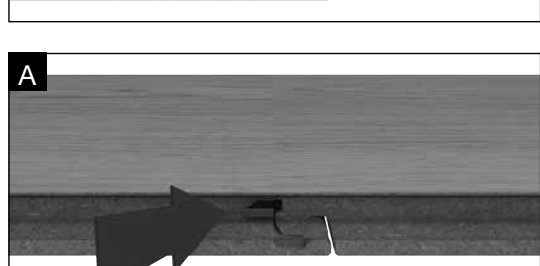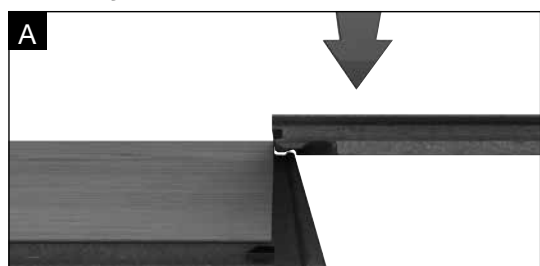

GB

ATTENTION: PLEASE ONLY OPEN THE PACKS  
DIRECTLY BEFORE INSTALLATION!

# SAGA HARDWOOD

farveringen

Installation instructions on the inside!  
Please read carefully before installation!

Easy to install: angle in the long side  
and put down on the short side - that's it!



**Lindura**  
SURFACE TECHNOLOGY

## INSTALLATION AND CARE INSTRUCTION SAGA HARDWOOD

**The SAGA Hardwood flooring is ideal for all dry living areas as well as commercial area with normal wear, e.g. offices, waiting rooms, boutiques etc. Not suitable for installation in damp rooms (bathrooms, saunas etc.). The flooring is not suitable for treatment rooms (e.g. doctor's surgeries or similar) for hygiene reasons.**

In these installation and care instructions, we sum up for you the most important information on installing and storing SAGA Hardwood flooring.

You need the following tools and aids for installing SAGA Hardwood flooring:

Hammer, electric saw **with carbide tipped saw blades or diamond-tipped saw blades**, folding metric rule, pencil, wedges, tension iron, angle or adjustable bevel.

Before installing SAGA Hardwood you must lay down an underlaymaterial. The underlaymaterial must have a compression strength (CS-value) of minimum 15 kPa and a punctual conformability (PC-value) of 1 mm or more.

## GENERAL INFORMATION

The flooring is installed as a floating structure without glue. This means that parts of the floor shall not be pressed down, fastened with screws or filled with glue around the perimeter of the floor. The MasterClicPlus Connection enables a quick and simple laying procedure. The plank is slotted into place by laying the next row. Additionally, this is a valuable help during laying, because it means the planks align automatically with each other. To install, slightly lift the plank and simply angle the tongue into the groove of the plank already laid (fig. A).

Nevertheless we recommend a „manual“ activation of the MasterClicPlus plastic part with the help of a 10 cm long cut piece of board.

If the floor area is longer or wider than 10m, you must provide an expansion joint. Cover this with a transition profile. It is also important to provide these joints between two adjacent rooms, in doorways, passageways and many-angled rooms.

Always use a jointing profile for clean transitions to adjacent, lower areas or floor coverings and an end profile next to higher adjacent thresholds, tiles or the like. Give stairs a clean finish with the stair edge profile.



During installation take care to next to all walls.

Areas < 6 metres = min. 10mm expansion gap to the wall and any other fixed obstacles such as - but not limited to - columns, door frames, kitchen, kitchen islands, wood stove, walls, stairs, radiator pipes etc. Additional 1.5mm expansion gap per additional linear metre. Maximum room length of 10m to be kept into account.

This distance must also be left around all columns, heating pipes, steel door frames etc. It may be possible to shorten wooden door frames. To do this, lay a loose plank wear-side down against the door frame and saw the frame off along the plank.

To protect the wood from scratches, you should also fit chair and furniture feet with felt sliders; Office chairs, mobile containers etc. on castors must have soft, standard running surfaces. We recommend protecting the floor in these heavy wear areas with appropriate floor protection mats (e.g. polycarbonate mats).

### Longitudinal side interlocking:

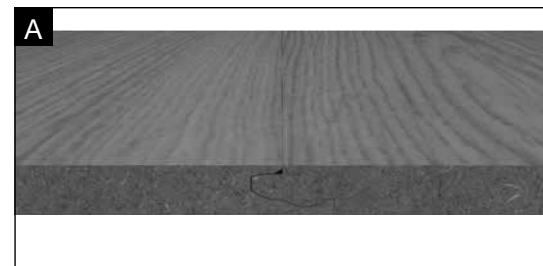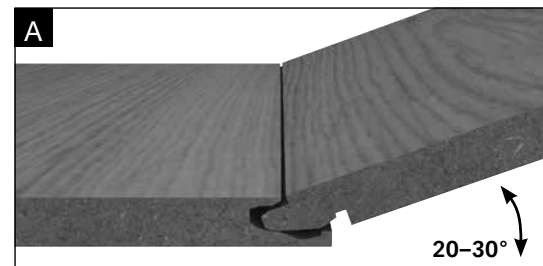

### Face side interlocking:

